

ROD RIG

Userguide for Alpacka raft mount




Dealer:

 **Avanza**
KAYAK & OUTDOOR

Syrsegränd 3
12551 Älvsjö
Sweden
Phone +46 8 6474720
www.avanzakayak.com
info@avanzakayak.com



1. Separate the parts. Note left carbon tube marked with logo.

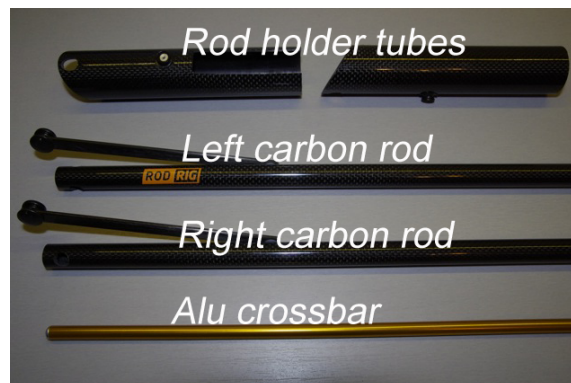


2. First mount each rod holder with the push button as shown on picture.



3. **NB: Rod Holder is equipped with special pushbuttons that can only be put on and lifted off in one direction! There is a slight edge inside the button which must hook first. This edge is locking the pushbutton and prevents it from popping up during use! Button is pressed and lifted by the marked DOT!**




4. Crossbar is threaded through holes in the carbon tube and the rod holder. One or both rod holders can be mounted.

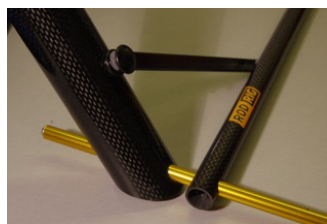

5. The two carbon rods is inserted in each of the fastening loops in front.



6. Next, insert the crossbar in the rear loops. The width is adjusted by sliding the rod holders laterally on the aluminium crossbar.

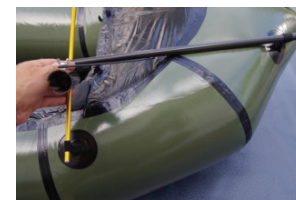

7. The fishing can start with one or two rods. GOOD FISHING!

